


Assembly Instructions


# HYGINITY Folded Towel Dispenser XS

Item No.: 333428 / 333429


HYGINITY Falthandtuch Spender XS  
HYGINITY Handdoekdispenser XS  
HYGINITY Distributeur essuie-mains plies XS  
HYGINITY Dozownik do ręczników składanych XS

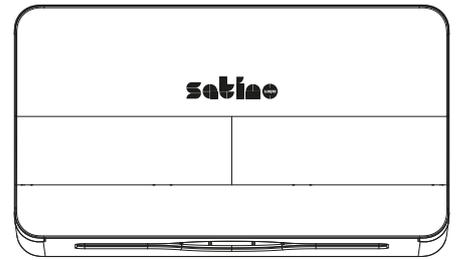

## Supplied

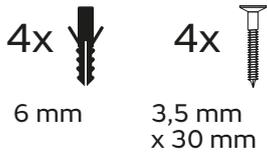


## Needed tools

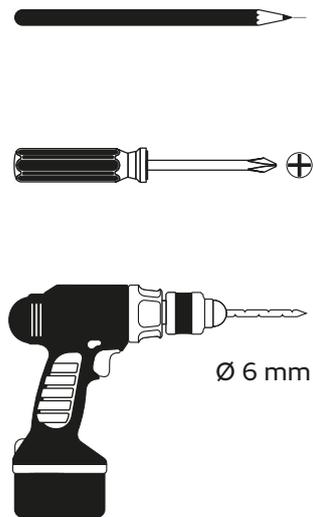



## Mounting Plate



Attaching  
Dispenser to  
Mounting Plate

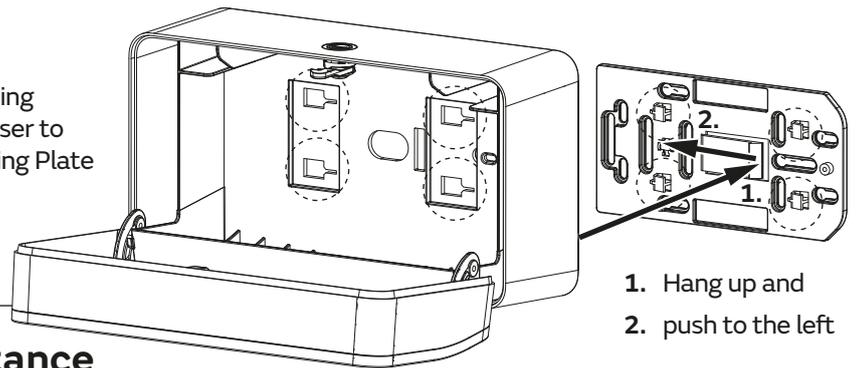

## Preferred distance

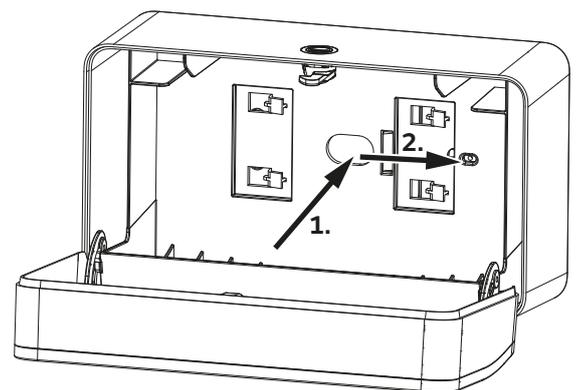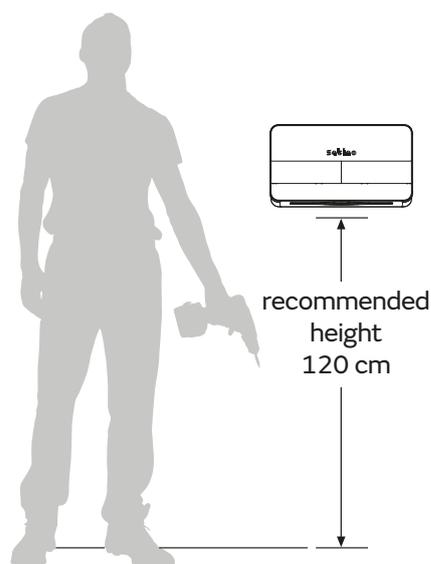

Removing Dispenser from Mounting Plate

1. Push inner snapper and 2. push to the right

Suitable for  
**PT3**

**HYGINITY**  
**Folded Towel Dispenser XS**  
Item No.: 333428 / 333429

If you want to use the permanent key, press the pin in after you have inserted the key.

## Key options

### Removable key

To use the removable key, the pin must be pulled out.


Pin outside

### Permanent Key

Push Pin inwards

## Paper change

Please place **original** Satino Paper Towel PT3 in the Dispenser

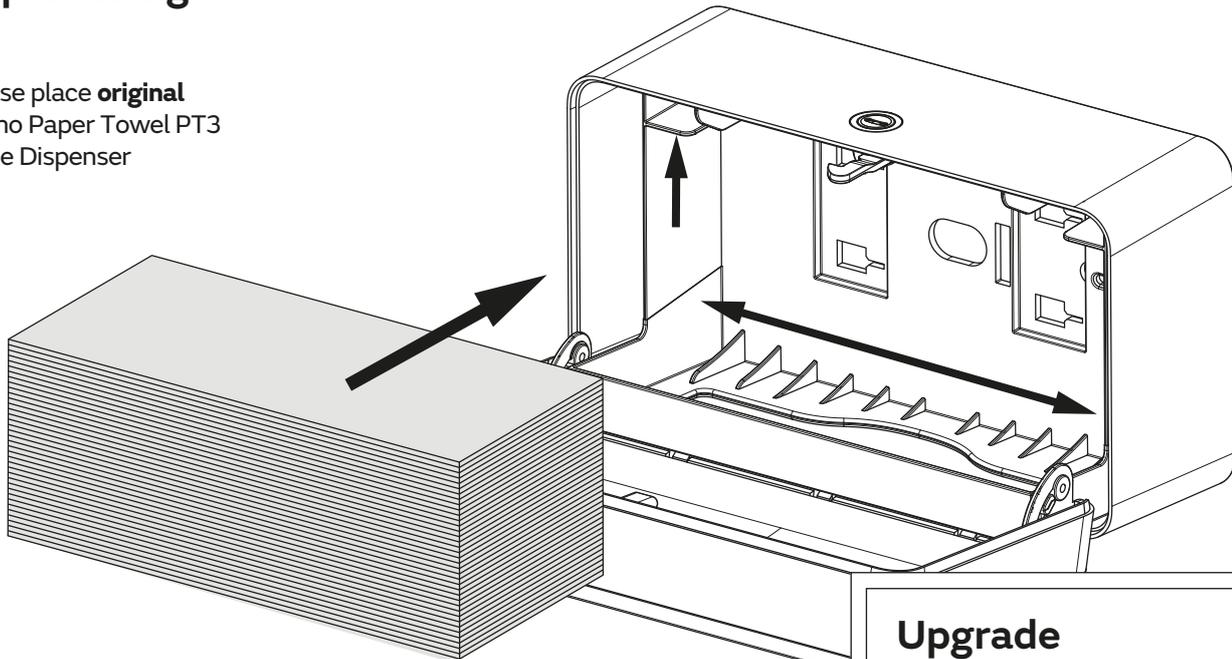

Insert the paper into the dispenser from the front. Pay attention to the height limit and the guides.

## Upgrade

Mounting hole group for optional sensor unit in the top left corner

